MODEL: 50013SL

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

CAUTION:
HEAVY SLATE FOUNTAIN
TWO PEOPLE REQUIRED TO LIFT AND ASSEMBLE

UNPACK THE FOUNTAIN

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: COLUMN, FOUNTAIN BODY, RESERVOIR AND PUMP.

FOUNTAIN ASSEMBLY

1. FEED THE RUBBER HOSE THROUGH THE HOLE IN FOUNTAIN BODY TOWARD BOTTOM OF THE FOUNTAIN BODY, THEN PLACE THE COLUMN ON TOP OF FOUNTAIN BODY AND TWIST THE COLUMN CLOCKWISE TO SECURE.

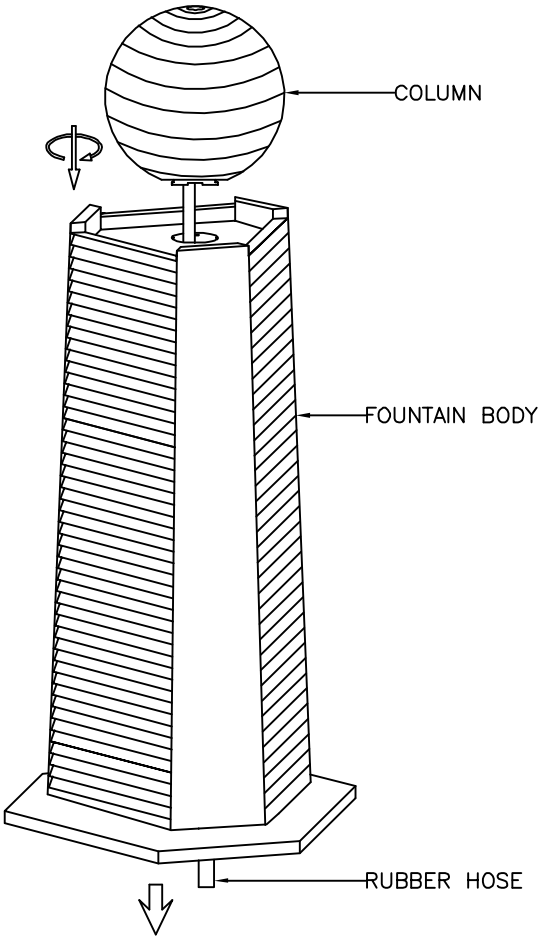

2. ATTACH PUMP TO THE RUBBER HOSE.

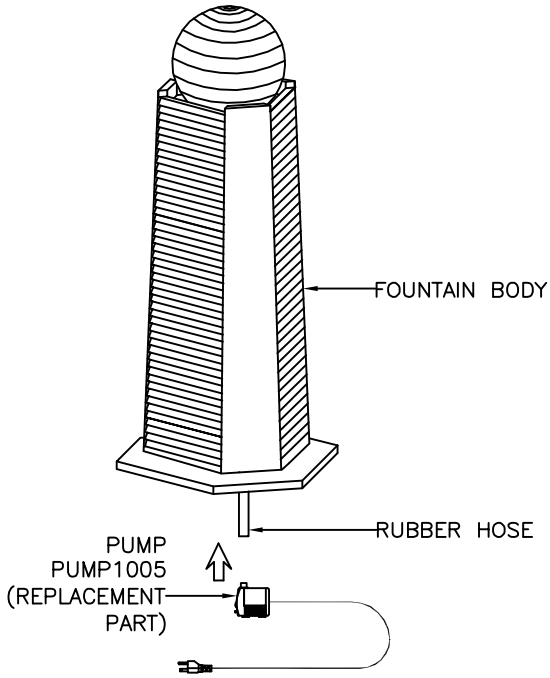

3. PLACE THE FOUNTAIN BODY WITH COLUMN INTO RESERVOIR, MAKE SURE THE PUMP POWER CORD EXITS FROM NOTCH ON BACK OF THE RESERVOIR.

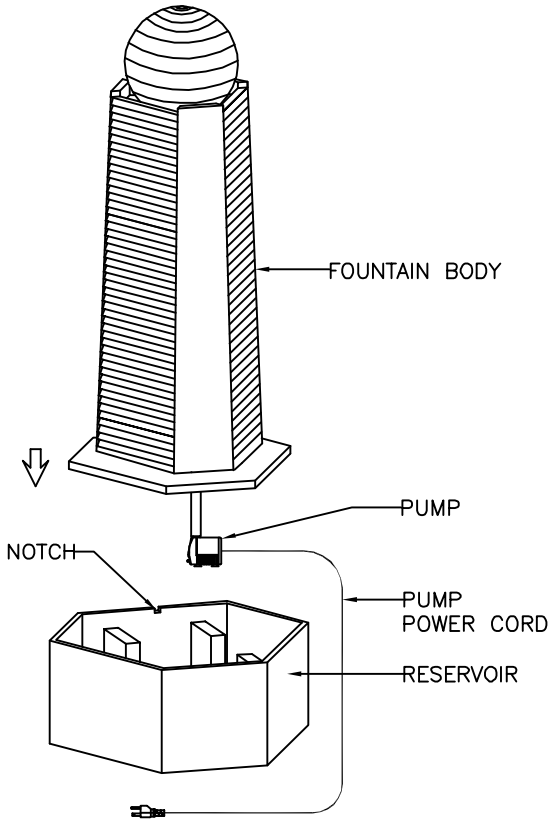

MODEL: 50013SL

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

FOUNTAIN ASSEMBLY

4. FILL RESERVOIR WITH 2.7 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP.
NOTE: DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD–UP.

5. TEST WATER RUNNING, ADJUST THE WATER VALVE ON PUMP IF NEEDED.

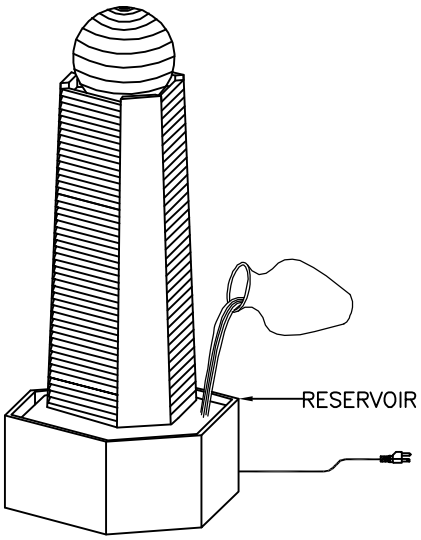

6. PLACE DECORATIVE RIVER STONES ONTO TOP OF THE RESERVOIR.

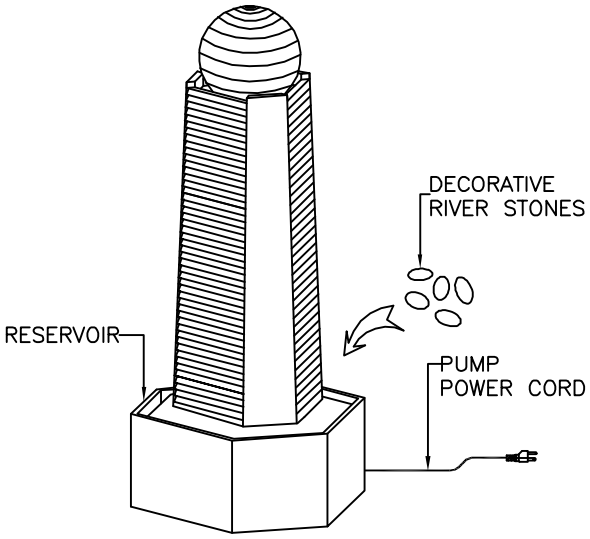

7. PLUG TPUMP POWER CORD INTO OUTLET, YOUR NEW FOUNTAIN IS READY FOR USE

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.

2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.

3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

WARNING:

* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD–UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

** THIS FOUNTAIN IS RATED FOR INDOOR & OUTDOOR USE.

*** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

AVAILABLE PART IS:
PUMP1005 (PUMP)